
 





**DILA(C)
DILM(C)7...M(C)15
DILMP20**

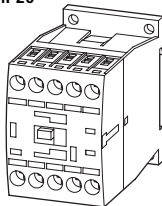

**DILM32-XHI(C)...
DILA-XHI(C)...**
Hilfsschalterbaustein
Auxiliary contact module
Module de contacts auxiliaires
Modulo contatti ausiliari
Módulo de contactos auxiliares
Модуль вспомогательных выключателей
辅助开关组



Montage ① aufsetzen ① place in position ① mettre en place ① 装配
Mounting ② rasten ② latch in ② encliqueter ② 装上
Montage ① appoggiare ① colocar en posición ① осадить ① 嵌入
Montaggio ② inserire a scatto ② enclavar ② зафиксировать ② 嵌入
Montaje
Разборка ③ schieben ③ push ③ pousser ③ 推
Demontage ④ abziehen ④ remove ④ retirer ④ 拔出
Dismantling
Smontaggio ③ inserire ③ desplacer ③ задвинуть
Desmontaje ④ estrarre ④ extraer ④ снять
Разборка
拆卸

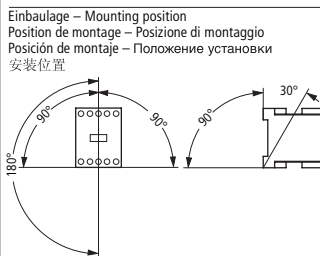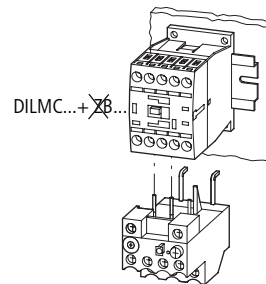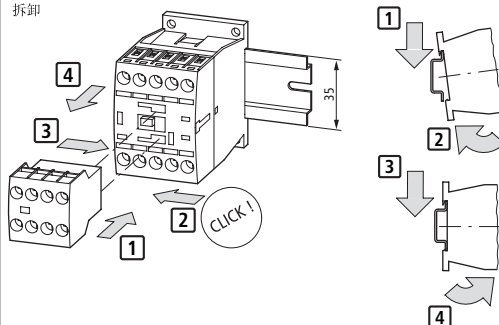


08/06 AWA2100-2126
Montageanweisung
Installation Instructions
Notice d'installation
Istruzioni per il montaggio


Instrucciones de montaje
Инструкция по монтажу
安装说明

	mm ²	AWG	Nm	lb-in
	1 x (0.75 - 4)	18 - 10	1.2	11
	2 x (0.75 - 2.5)			
	1 x (0.75 - 2.5)			
	2 x (0.75 - 2.5)			
	-			

	mm ²		1 x (0.75 - 2.5)	2 x (0.75 - 2.5)
	1 x (0.75 - 2.5)		1 x (0.75 - 2.5)	2 x (0.75 - 2.5)
	2 x (0.75 - 2.5)			
	1 x (0.75 - 2.5)			
	2 x (0.75 - 2.5)			

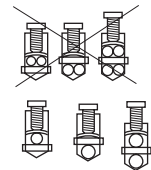

**DILM(C)7...M(C)15
DILMP20**

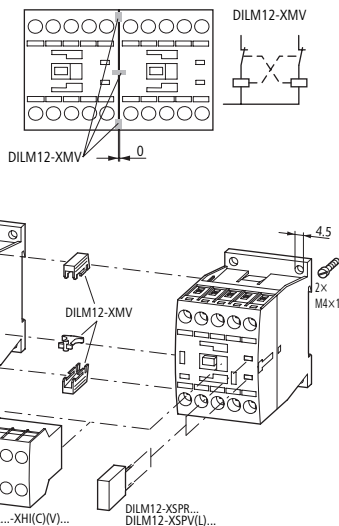

Warning!
 The opening of the branch-circuit protective device may be an indication that a fault has been interrupted. To reduce the risk of fire or electrical shock, current-carrying parts and other components of the controller should be examined and replaced if damaged. If burnout of the element of an overload relay occurs, the complete overload relay must be replaced.

